




TC20 & TC28 OPERATING INSTRUCTIONS

9999 539488
9999 539489

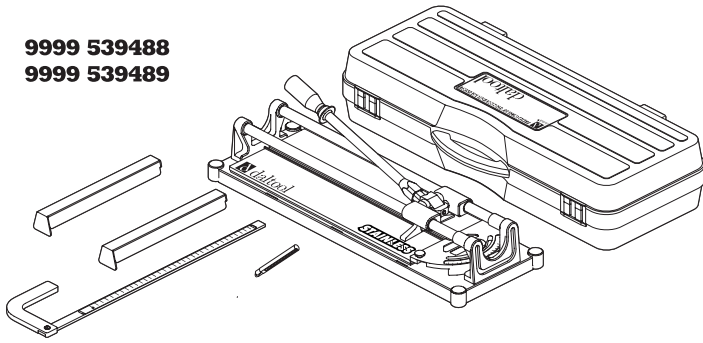

SPECIFICATIONS

Model	Max. tile size		Cutting thickness	Weight (lbs)	Dimensions LxWxH	Max. separator force (lbs)
	Straight	Diagonal				
TC20	20"	14"	1/4"-7/8"	18	27 1/2 x 9 1/4 x 5	1,300
TC28	28"	20"	1/4"-7/8"	30	37 1/2 x 12 1/2 x 5	1,300

1. Unpacking

The DalTile® Stainless Steel Dry Cutters are supplied complete with:

- 3/8" Scoring Wheel
- 18" Adjustable Tile Stop
- Angular Measuring Device 0°-45°
- Products Supports for larger tile
- Carrying Case
- Instruction Manual

Always inspect your new dry cutter for damaged parts before use.

2. Setting up your Dry Cutter

Place a tile on the dry cutter and mount the scoring wheel. Secure the scoring wheel at the de-sired height by turning the handle on the lever. Note that the slots in the scoring wheel holder are in line with the lever.

Do not use damaged or worn out scoring wheels, this will decrease the quality of the cut or result in breakage of the tile.

3. Cutting Procedures

Put the tile onto the base plate at the desired position (3) and angle (5). Note that the glazed side of the tile faces upwards.

Position the scoring wheel at the beginning of the tile and move the scoring wheel over the tile in one smooth movement.

When cutting very rough tiles it may be necessary to repeat the scoring movement until a continuous groove is made.

Move the cutter into the breaking position (4) by pulling the slide tube on the lever. Put the breaker at the end of the tile near the end stop. Move the lever down and apply sufficient force to break the tile.

Repetitive Cuts

The DalTile® Dry cutters are supplied with an adjustable tile stop that allows for repetitive cuts. Simply secure the Cutting Guide at the desired dimension to cut identical tiles.

Cutting larger tiles

In order to avoid breakage of lager tiles, the DalTile® dry cutters are supplied with two product supports. These product supports can be hooked onto either side of the base plate.

Maintenance

DalTile® Dry Cutters are designed for minimum maintenance and durability. For the longevity of your DalTile® Dry Cutter and continued smooth cutting movement simply keep the guiding bars dry and clean from cutting debris.

Store the Dry Cutter clean and dry in the original carrying case.

Scoring Wheels


Scoring Wheels are an integral part of your Manual Tile Cutter. The Performance of your Manual Tile Cutter depends highly on the quality of the Scoring Wheels. We recommend you use original DalTool® Scoring Wheels, which have proven their reliability when it comes to realizing Precise Cuts time after time.

The use of DalTool® Scoring Wheels will result in a smoother cutting movement and far less tile breakage.

Available Scoring Wheels:

- DalTool® 1/4" (6 mm) Scoring Wheel for Wall Tile.
Part Number: 9999-539523
- DalTool® 3/8" (10 mm) Scoring Wheel for Floor Tile.
Part Number: 9999-539524
- DalTool® 3/4" (18 mm) Scoring Wheel for Hard Floor Tile.
Part Number: 9999-539525

SPARE PARTS

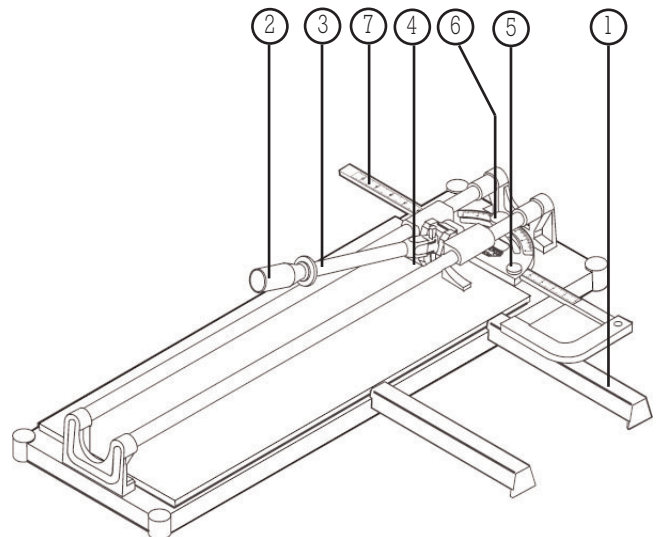

POS. #	ITEM NR.	DESCRIPTION
01	4.050.005	TILE SUPPORT
02	4.050.010	GRIP + THREADED ROD
03	4.050.015	LEVER
04	4.050.020	SPRING
05	4.050.030	KNOB + NUT
06	4.509.105	KNOB
07	4.050.026	SIDE STOP + RULER